CT Department Work Flow Tip Exam: CYSTOGRAM



QDOC Exam Code: CPEL-

Protocol required

Systems: 16 slice to 256 slice

Protocol Location:



Exam:





Revised: 06-21-12

Supplies needed

- 1. 500cc bag Sterile Saline
- 2. Infusion Set
- 3. Omni 300 15ml
- 4. 18g x 1 ½" Safety Needle







This a considered a sterile procedure, maintain sterile protocol when drawing and injecting contrast into the saline bag.

1. Scout: AP(180) 300Scan Length

Breath Hold: none

2. Slice Thickness: 5mm x 2.5mm

3. **Recons Thins:** 2mm x 1mm

MPR: Coronal 5mm x 2.5mm
MPR: Sagittal 5mm x 2.5mm

4. IV access: NA

5. PO Prep: none

5. **Contrast:** 500cc sterile saline bag – 15cc Omni 300


infuse 250-300cc or until pt cannot tolerate

then scan.



Scout


Pelvis Acq.

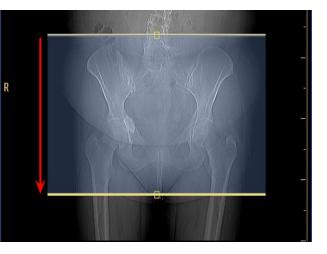

Coronal



Sagittal

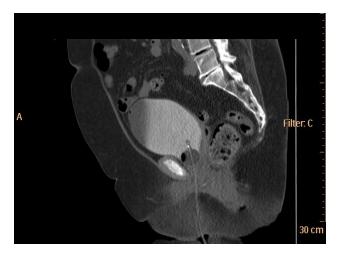

Complete exam in QDOC

 If there are any questions about Protocol contact the Protocoling Rad.



