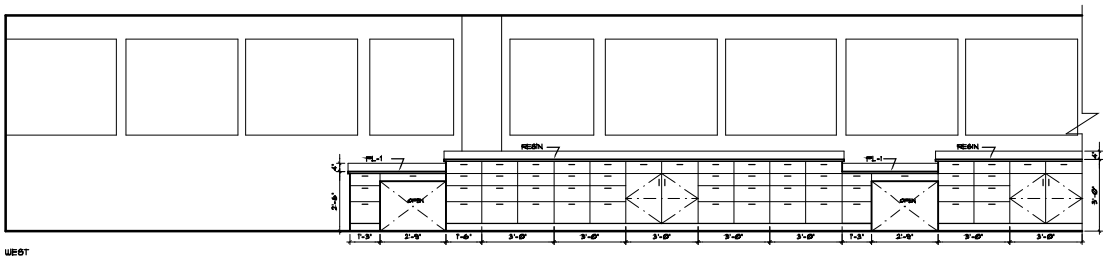

WEST

1 A7.1 Research Area 1
SCALE: 1/2" = 1'-0"

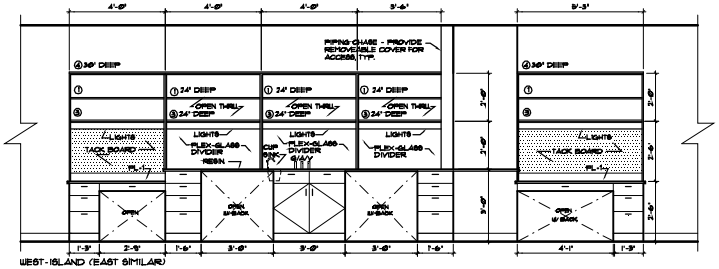

WEST-ISLAND (EAST SIMILAR)

2 A7.1 Research Area 1
SCALE: 1/2" = 1'-0"

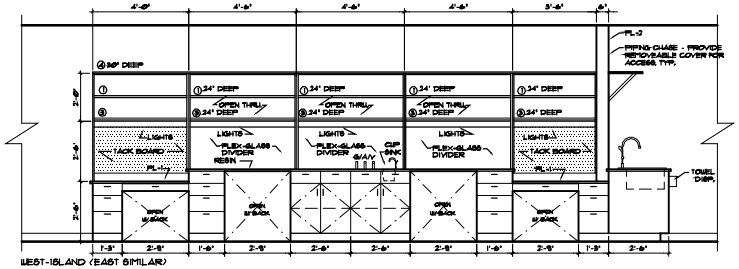

WEST-ISLAND (EAST SIMILAR)

3 A7.1 Research Area 1
SCALE: 1/2" = 1'-0"

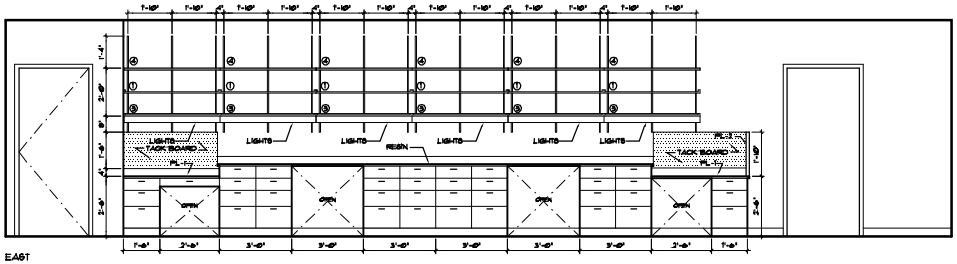

EAST

4 A7.1 Research Area 1
SCALE: 1/2" = 1'-0"

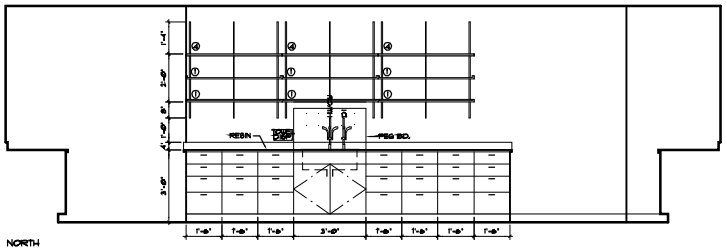

NORTH

5 A7.1 Research Area 1
SCALE: 1/2" = 1'-0"

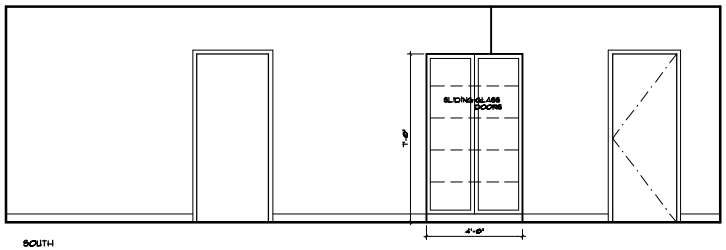

SOUTH

6 A7.1 Research Area 1
SCALE: 1/2" = 1'-0"

LEGEND:

CABINET WORK & SHELVING:

- ALL CABINWORK IS METAL LAB CABINWORK, U.N.O.
- CUSTOM CABINWORK P.L. CONST. COLOR PL-2, U.N.O.
- ① PL. SHELVING W/ BRCKTS @ EA. END, 4" WIDE, 12" DEEP U.N.O. SEE 1/A6.1
- ② SAME AS ① W/ PLEX-GLASS LIP & FRONT, SEE 1/A6.1
- ③ SAME AS ②, FIXED W/ UNDERCABINET LIGHT
- MILLWORK
- ④ PL. WOOD SHELF 24" DEEP U.N.O.

P.L. PLASTIC LAMINATE
-G GAS - REF. MECH.
-A LAB AIR - REF. MECH.
-V LAB VAC. - REF. MECH.
D.I. DE-IONIZED WATER

NOTES:

1. PROVIDE (AB) BRCKETS IN P.L. COUNTERTOPS. VERIFY LOCATIONS W/ ARCHITECT PRIOR TO INSTALLATION.
2. VERIFY LOCATION OF TOWEL DISP. PRIOR TO INSTALLATION.